

Remote control battery replacement

In order to replace battery in remote control:

1) Press upper part of the back side of remote control

2) Shift it down

3) Lever the case



2 x CR2032 (3V)

Wall switch battery replacement RF

In order to replace battery in wall switch undermine lightly the case at both sides.



PROG button



1 x 27A 12V



PROG buttons



1 x 27A 12V

Remote controls (RF)



43mm x 123mm x 11mm

Pilot

1-channel AC127-01
2-channel AC127-02
6-channel AC127-06
16-channel AC127-16



86mm x 86mm x 11mm

Wall switch RF

1-channel AC125-01
2-channel AC126-01



32mm x 55mm x 9mm

(USB charged)

1-channel MINI AC129-01
4-channel MINI AC129-04